


Use

For inspecting and cleaning the ventilation ducts, the access doors are installed in easily accessible places. Placement in the duct system:

- The required distance between access doors depends on the construction and the cleaning method of the system.
- The locations and distances between the access doors should ensure the possibility for cleaning the ducts in their entirety.
- The access doors should be installed within fire barriers, into ducts close to bends of at least 45°, into horizontal ducts every 8 m (max. distance 10 m), and in branching points of the ducts.

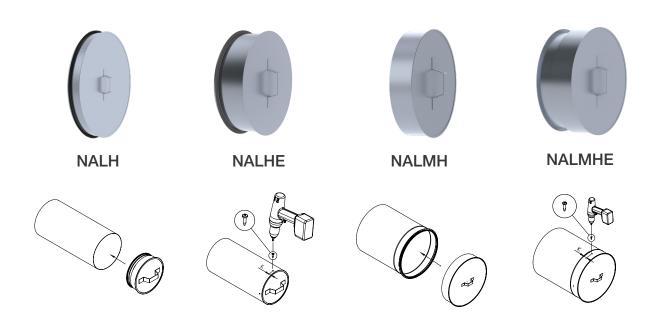




TL3


- 1. Attach the mounting template to the pipe directly in the longitudinal position.
- 2. Cut the edge along the label and finish the cut. Leave the mounting template alignment marks on the pipe.
- 3. Install the access door by using the opening alignment marks.
- 4. Lock the access door by twisting the handle down.

  The quality of work is guaranteed by professional working methods.













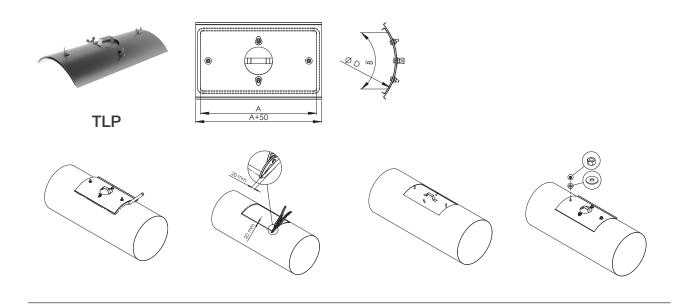

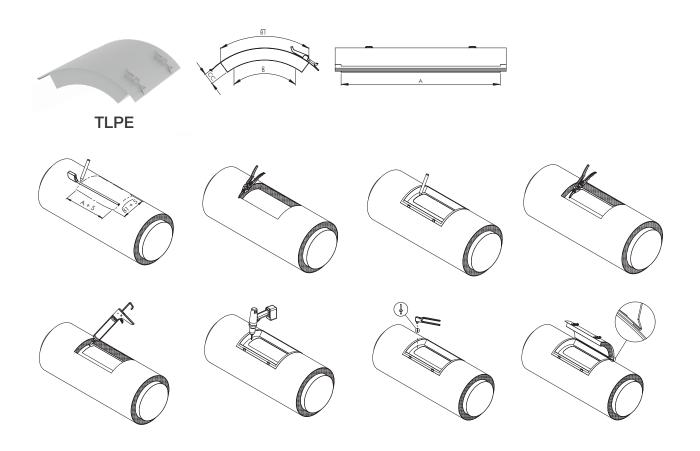



TL1



